



Quick Start Guide

Product installation instructions

Version 2023



INTRODUCTION

About this document

This document covers the following Elum products:

- ePowerControl:
 - Energy Storage Controller: ES+

It serves the purpose of providing the users with a simplified guideline for the installation and configuration of these devices.

This document is divided into three sections:

- PART 1: Device installation (wiring, power supply..)
- PART 2: EMS configuration in 11 steps
- PART 3: Help Section: Troubleshooting

Disclaimer

This document is for general information only.

Elum Energy's commitments are defined in the applicable purchase contracts only, and are not affected by the content of this document.

This document is the property of Elum Energy and may not be reproduced, edited, or copied without prior written permission of Elum Energy.



PART 1. Device Installation	4
1. Elum device power supply	4
Option A. Power supply when in kit	4
Option B. Power supply when in Elum casing	5
2. Communication	6
2.1. Internet connection	6
Option A. Cellular internet connection	6
Option B. Wired internet connection	6
2.2. Slave devices connection	7
Option A. Connecting devices through serial	7
Option B. Connecting devices through Ethernet	7
HELP Section: Understanding the LEDs	8
PART 2. EMS Configuration	9
Step 1- Connecting the laptop to the Elum device	9
Step 2- Connecting to eConf (Elum Configuration interface)	9
Step 3- Internet configuration	10
Step 4- Firmware	11
Step 5- Site settings	12
Step 6- Network configuration (ports)	12
Step 7- Network configuration (devices)	13
Step 8- Validation	16
Step 9- Data forwarding	16
Step 10- Control settings	17
Step 11- Saving the configuration and starting the EMS	21
HELP Section: Troubleshooting	22
Communication issues	22
Serial Communication issues	22
Ethernet Communication issues	22
Internet Communication issues	23
Reboot / Start issues	23
Reverse power protection issues	24
Power meter reading issues	24

PART 1 - DEVICE INSTALLATION

This chapter describes the product installation. It is important to finalize all the installation work before starting the configuration.



Please read carefully the safety instructions in the product [user manual](#) prior to installation.

1. Device power supply

This section describes the installation of the power supply for the Elum device when delivered in a kit (option A) and in Elum casing (option B). Please refer to the option relevant to your application.

→ Option A. Power supply when in kit

Elum devices require a power supply that can deliver the following:

Input Voltage	12 to 36 VDC
Power Consumption	50 W

Table 1: Elum devices power supply (in kit)

The Power supply connector is on the top side of the device:

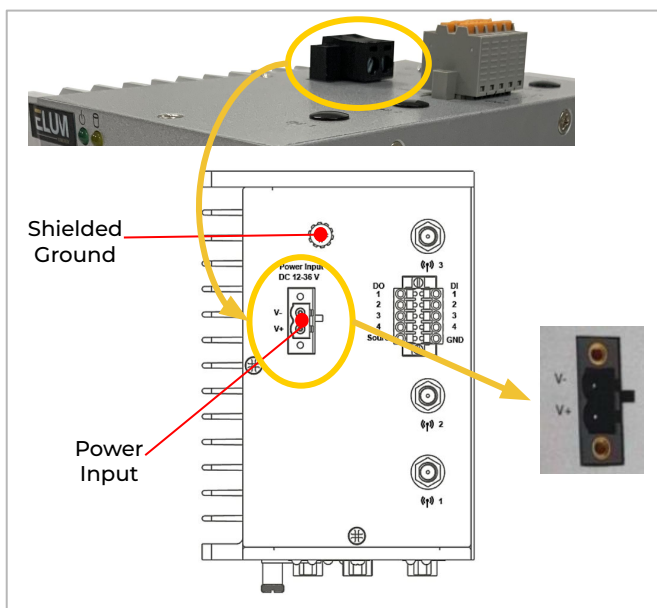


Figure 1: Elum device power input (in kit)

The Shielded Ground wire (Protected Ground) must be connected to an appropriate grounded metal surface.

Once the power supply is connected, the power LED will light up.


→ Option B. Power supply when in Elum casing

Elum devices require a power supply that can deliver the following:

Input Voltage	100 - 240 VAC, 50 Hz / 60 Hz
Power Consumption	50 W

Table 2: Elum devices power supply (in Elum casing)

The power connectors are wired to a single screw terminal block on the left side of the DIN Rail. Please follow the steps below to connect the power supply.

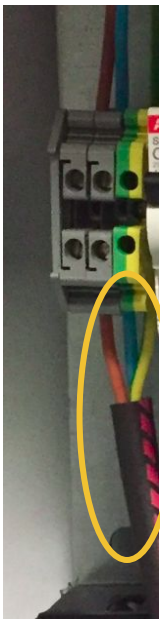

1. Connect the phase wire to the **red/brown** wire,
2. Connect the neutral wire to the **blue** wire,
3. Connect the ground wire to the **green/yellow** wire,
4. If a UPS was provided with the ePowerControl, connect the battery **red/black** wire to the transformer,
5. Close the circuit breaker, the power LED will light up.

Figure 2: Terminal block overview



For both options, the power source must be taken from the load side, to ensure a continuous power supply constantly. The power source of the UPS must follow the same rule.

After 60 seconds, the operating system will be ready, and the power LED will turn solid green.

Check that the Power LED of the Central Computing Unit is on. _____





2. Communication

2.1. Internet connection

Connecting the device to internet can be done in two ways:

➔ Option A. Cellular internet connection

- Turn off the Elum device.
- On the top side of the device, connect the three wireless antennas to the dedicated connectors.
- On the rear side of the device, open the cover of the SIM card slot with a screwdriver.
- Insert the SIM card. You'll hear a click.
- Close the cover.

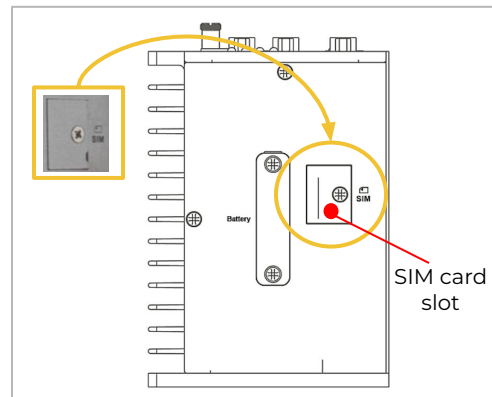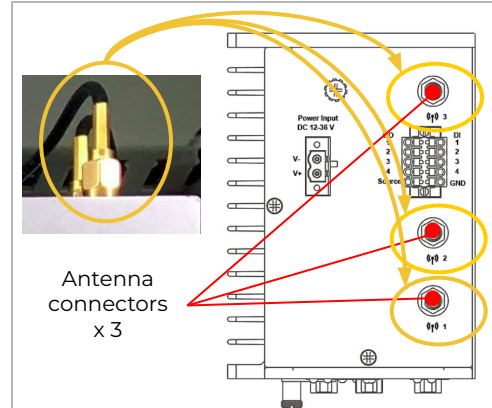

You may now turn on the Elum device.




The device must be turned off each time a SIM card is inserted or removed from the SIM card slot. In case of SIM card replacement, it is necessary to perform an empty start of the device.

➔ Option B. Wired internet connection

Elum devices can be connected to wired internet through the LAN port 1, 2 or 3.

A switch can be connected to each of the LAN ports if more ports are needed.

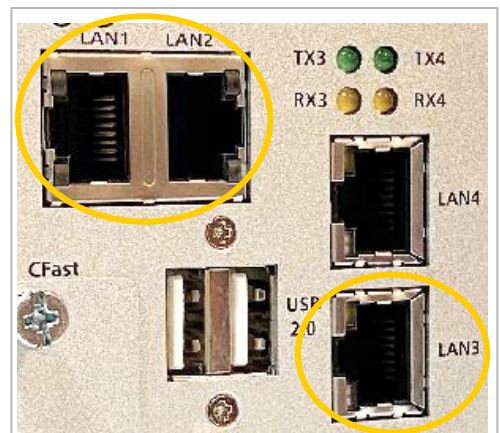

2.2. Slave devices connection

Slave devices can be connected either through serial and/or Ethernet. Please refer to the option relevant to your application.



For both options, it's highly recommended to use a surge protection to avoid any issues on the communication ports.

➔ Option A. Connecting devices through serial


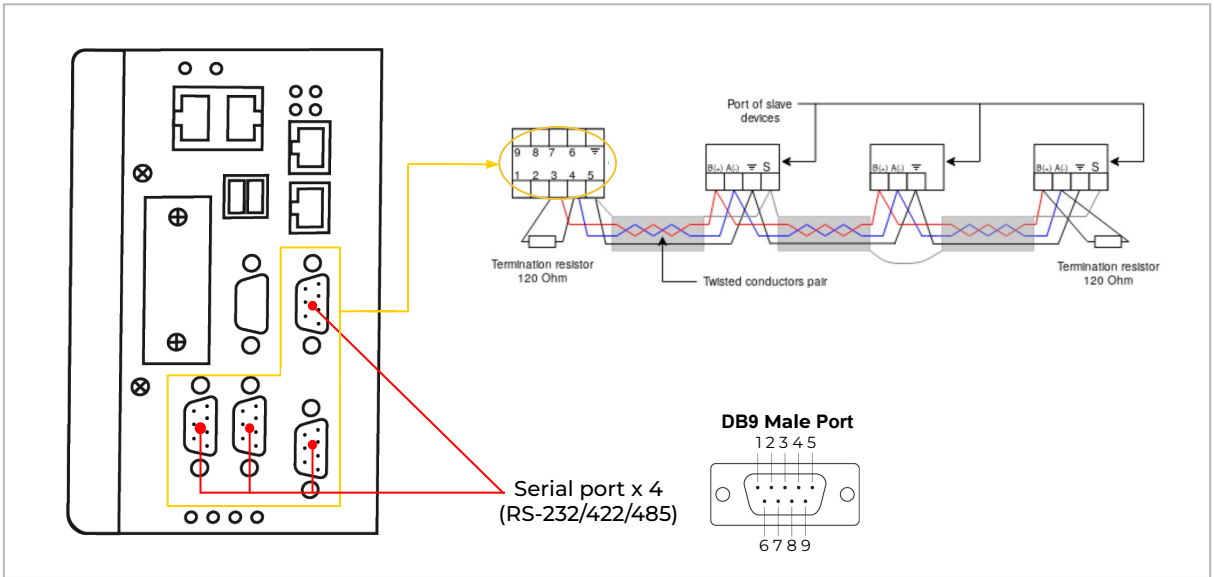


Figure 3 : Serial connection drawing

➔ Option B. Connecting devices through Ethernet

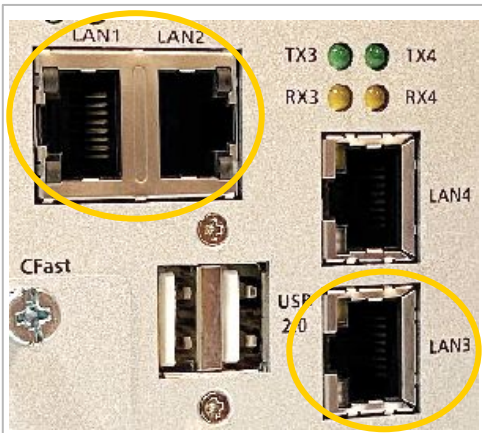

The slave devices can be connected through Ethernet to the Elum device using port LAN 1, 2 and 3. Use a RJ45 cable to connect the LAN to your device.

A switch can be connected to each of the LAN ports if more ports are needed.

NEED ADDITIONAL HELP ?

→ Understanding the LEDs

When Elum devices are powered, all LEDs should be turned on for 1 second then off for 60 seconds (*internet connection and services starting*)

After 60 seconds, the color of the LEDs will help perform a quick diagnosis of the system behavior.

The table below shows the interpretation of the different case scenarios.












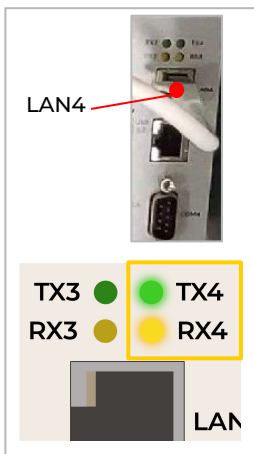
LED name	Status	Diagnosis
Power	Green 	Power is on. Normal operating mode.
	Off 	Power is off.
Storage	Yellow 	Blinking: Data is being transmitted.
	Off 	No data transmission.
LAN 1/2/3/4	Green 	100 Mbps Ethernet link. Blinking: Data is being transmitted.
	Yellow 	1000 Mbps Ethernet link. Blinking: Data is being transmitted
	Off 	10 Mbps Ethernet link or LAN is not connected.
Tx 1/2/3/4	Green 	Blinking: Data is being transmitted.
	Off 	LAN Not connected.
Rx 1/2/3/4	Yellow 	Blinking: Data is being received.
	Off 	LAN Not connected.

Table 3: LEDs diagnosis

PART 2 - EMS CONFIGURATION

Once the installation is done, the configuration of Elum devices can start. Please follow the steps described below carefully.

STEP 1 - CONNECTING THE LAPTOP TO ELUM DEVICE



Connect the device to your computer, by connecting one end of a RJ45 cable to the Port LAN 4 of the device, and the other end to your computer.

Once the connection is established, the LEDs Tx4 & Rx4 indicator will flash on and off.

STEP 2 - CONNECTING TO ECONF

Open your favorite browser, and login to eConf, Elum's configuration interface, by entering the following IP address: 192.168.4.127



Enter the password of your choice.

It is recommended to use a strong password. (8 characters minimum, with a mix of alphabetical (upper and lowercase) numeric, and special characters)

Click "Continue".

STEP 3 - INTERNET CONFIGURATION

Select the interface to use:

ELUM Energy

1 Internet Optional 2 Firmware Optional 3 Site Optional 4 Network 5 Data Forwarding 6 Control 7 Finish

Configure internet access

Interface *

Continue >

Skip >

You can either connect through a SIM card:

Interface *

3G access - builtin

pin_code

apn *

Error with apn

user

password

Cancel OK

Or connect through an Ethernet network*:

Interface *

LAN1

IP Settings

DHCP Static

IP Address
10.13.146.25

Subnet Mask
255.255.0.0

Router / Gateway
10.13.0.1

Continue >

Skip >


* When connecting through Ethernet, please open the following **outgoing** ports. This is needed to connect the Elum device to our back end:

- ICMP
- TCP ports: 53, 80, 443, all ports from 1198 to 1210, 4505 and 4506
- UDP ports: 53, 123, 1195, all ports from 1198 to 1210

Click "Continue".

STEP 4 - FIRMWARE

eConf offers to install the latest firmware version on the device. Click “Check updates”. The latest version will appear if applicable. Click on the download icon to start.

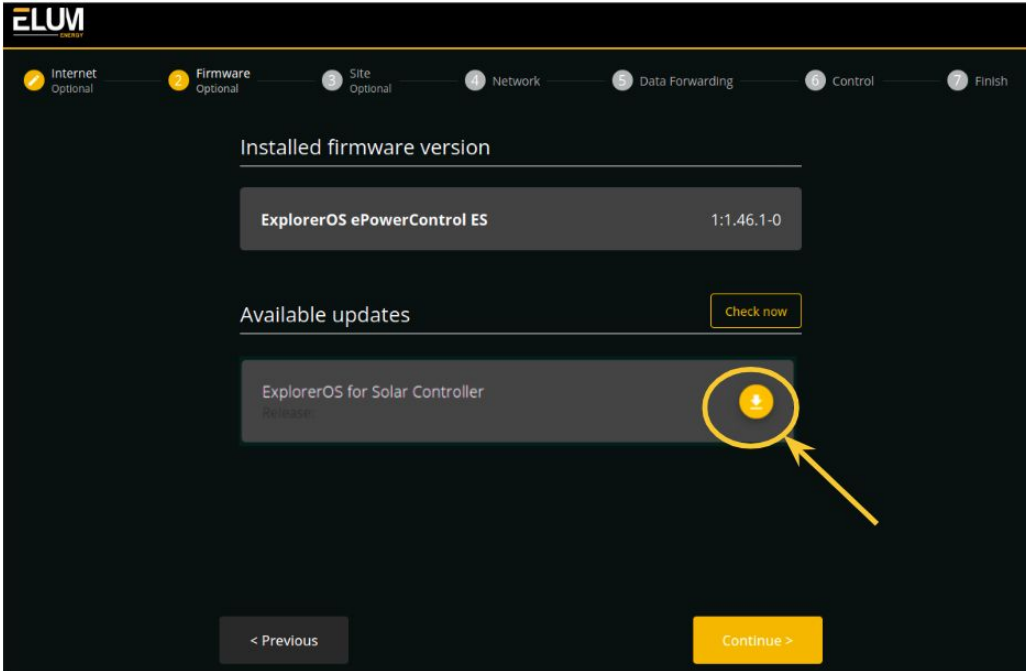

This process cannot be interrupted. Please ensure that the device remains on and connected to the internet to avoid any issues.

The device will automatically reboot once the update is done. The previous configurations should be retaken.



Click “Continue”.

STEP 5 - SITE SETTINGS

Insert the name and GPS coordinates of the site.

ELUM

Internet Optional Firmware Optional **3 Site Optional** 4 Network 5 Data Forwarding 6 Control 7 Finish

Site settings

Site name *

Coordinates

Latitude *

Longitude *

< Previous Skip > Continue >

Click “Continue”.

STEP 6 - NETWORK CONFIGURATION (PORTS)

Click on “Configure a New Connection”.

Select the interface of the port (serial or ethernet)

Internet Optional Firmware Optional 3 Site Optional **4 Network** 5 Data Forwarding 6 Control

+ CONFIGURE A NEW CONNECTION

Configure internet and device connections

Connection settings

Connection type *
Device communication

Interface *
Wired access - lan1
Serial - serial-1
Serial - serial-2

The port settings must be the same as the ones configured on the devices connected on it:

In case of serial devices :

In case of Ethernet devices :

Connection settings

Connection type *
Device communication

Interface *
Serial - serial-1

mode *
RS485

baudrate *
9600

parity *
NONE

byte_size *
8

stop_bits *

Cancel

OK

Connection settings

Connection type *
Device communication

Interface *
Wired access - lan1

mode *
DHCP

ip

mask

gateway

Cancel

OK



Select "DHCP" for an automatic allocation of the IP address.
Or "IP_Static" to add the IP address and network settings manually.

Click "Ok".

STEP 7 - NETWORK CONFIGURATION (DEVICES)

Click on "Add device", fill the boxes with the relevant information.
Please ensure that the Modbus communication is enabled on all devices.



Please contact Elum support if the device you're trying to connect is not listed, at support@elum-energy.com.

Adding the devices to the serial port

The screenshot shows the Network configuration page with the following sections:

- Serial-1**: Contains a "+ ADD DEVICE" button (circled in yellow), "Edit", "Test", and "Delete" options.
- Lan1**: Contains a "+ ADD DEVICE" button, "Edit", "Test", and "Delete" options.
- + CONFIGURE A NEW CONNECTION**: A button to create a new connection.

The "Device settings on serial-1" dialog box contains the following fields:

- Device name *
- Vendor *
- Reference *
- Protocol *


Buttons: Cancel, OK

The Serial port configuration dialog box contains the following fields:

- slave_id *
- response timeout: 0.5
- byte timeout: 0.1
- inter frame delay: 10

Buttons: Cancel, OK

Adding the devices to the Ethernet port

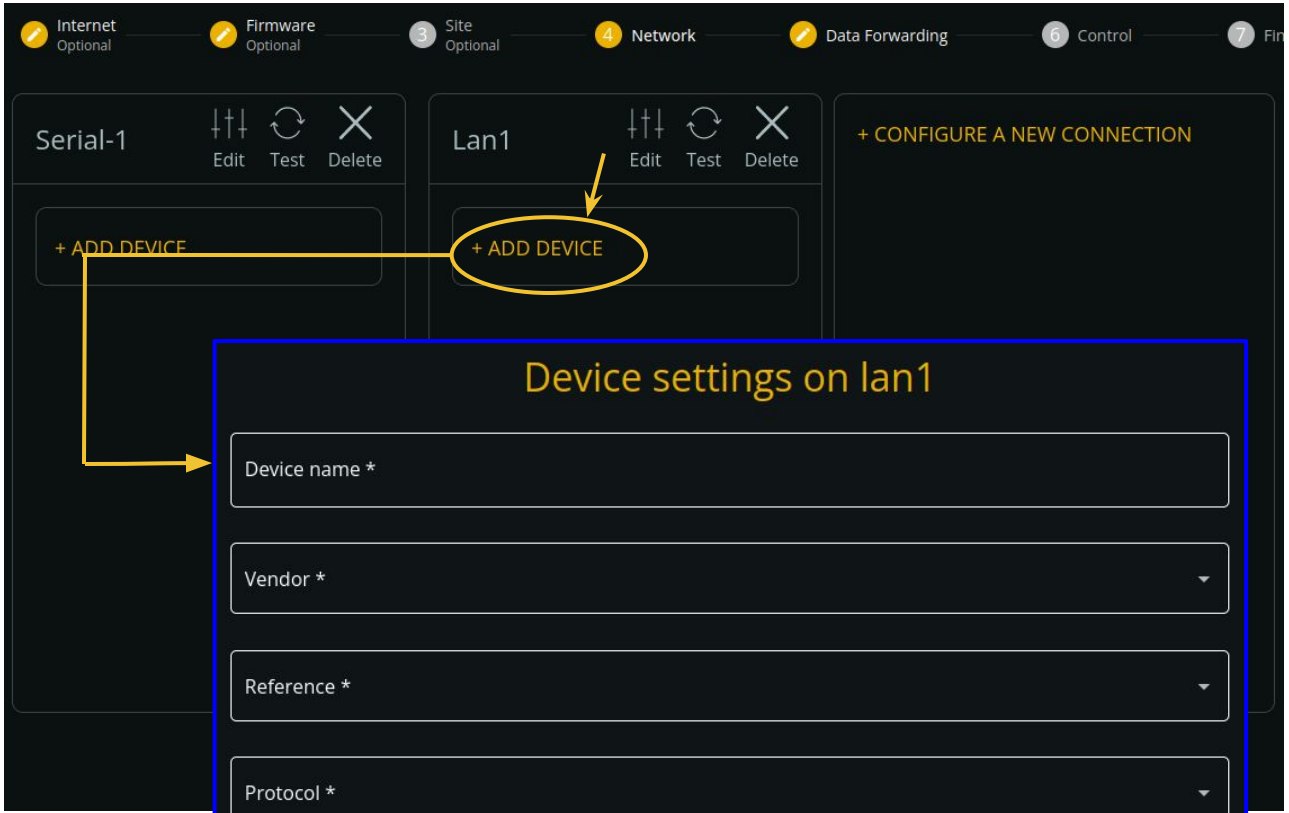

Device settings on lan1

Device name *

Vendor *

Reference *

Protocol *

Cancel OK

Device settings on lan1

mac_address *

ip *

port 502

slave_id 1

response_timeout 0.5

byte_timeout 0.1

Protect IP from concurrent access


Keep the TCP sessions open between requests

Cancel OK


STEP 8 - VALIDATION

The connection to the devices can be tested:

One by one:

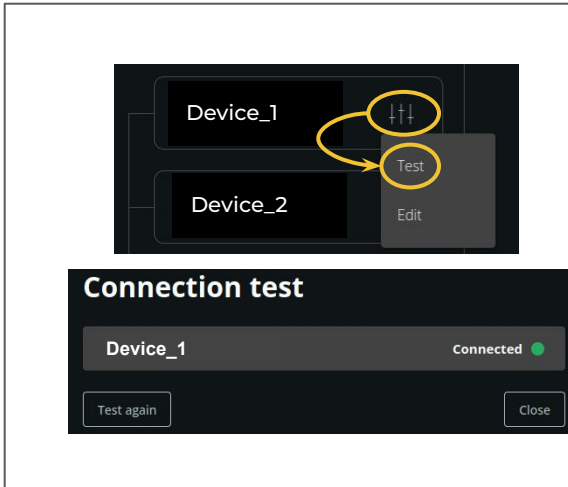

Or port by port:

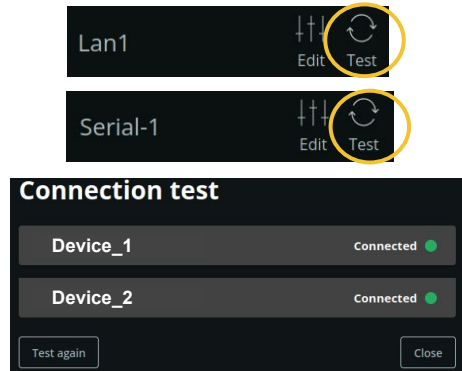


STEP 9 - DATA FORWARDING

Elum devices export data automatically to ePowerMonitor, the monitoring platform of Elum Energy.

In addition, Elum energy offers an option of exporting data to one or more third party monitoring platforms, or to USB devices.

This is the purpose of this tab.



You can configure the third party platform if applicable, or skip and move to the next page.

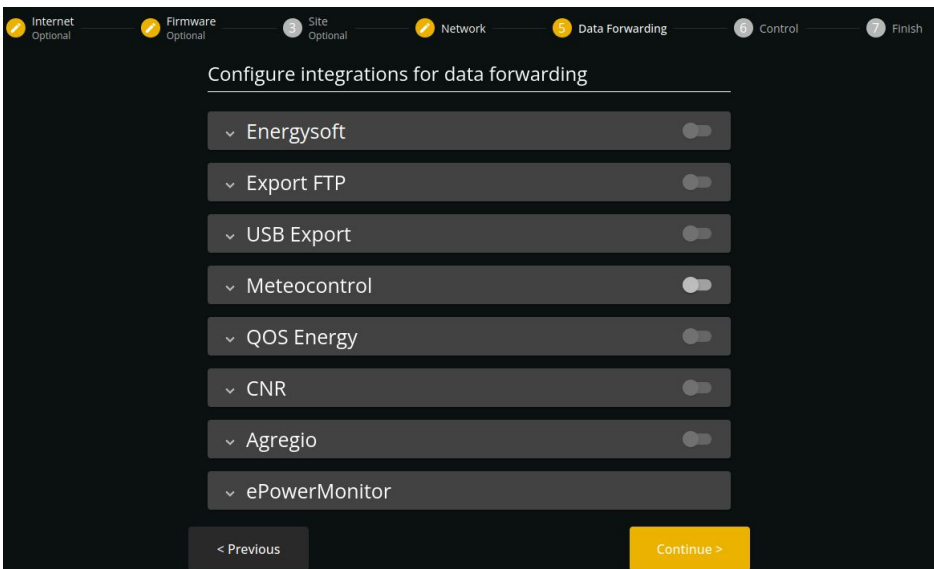

Click "Continue".

STEP 10 - CONTROL SETTINGS

Activate the control on the units relevant to your application, by clicking on each of the units.

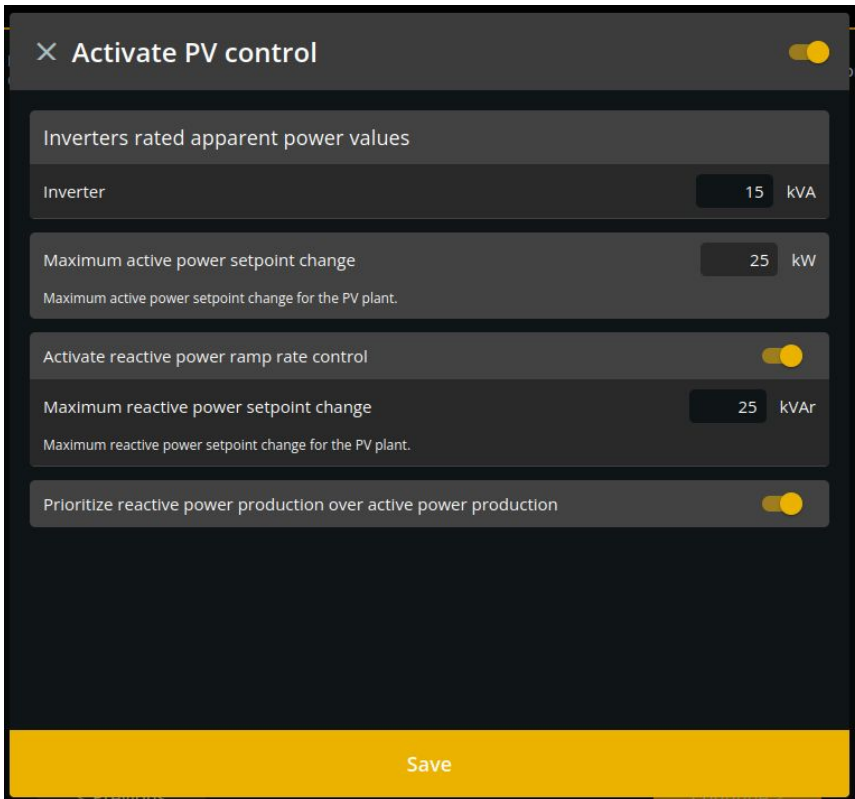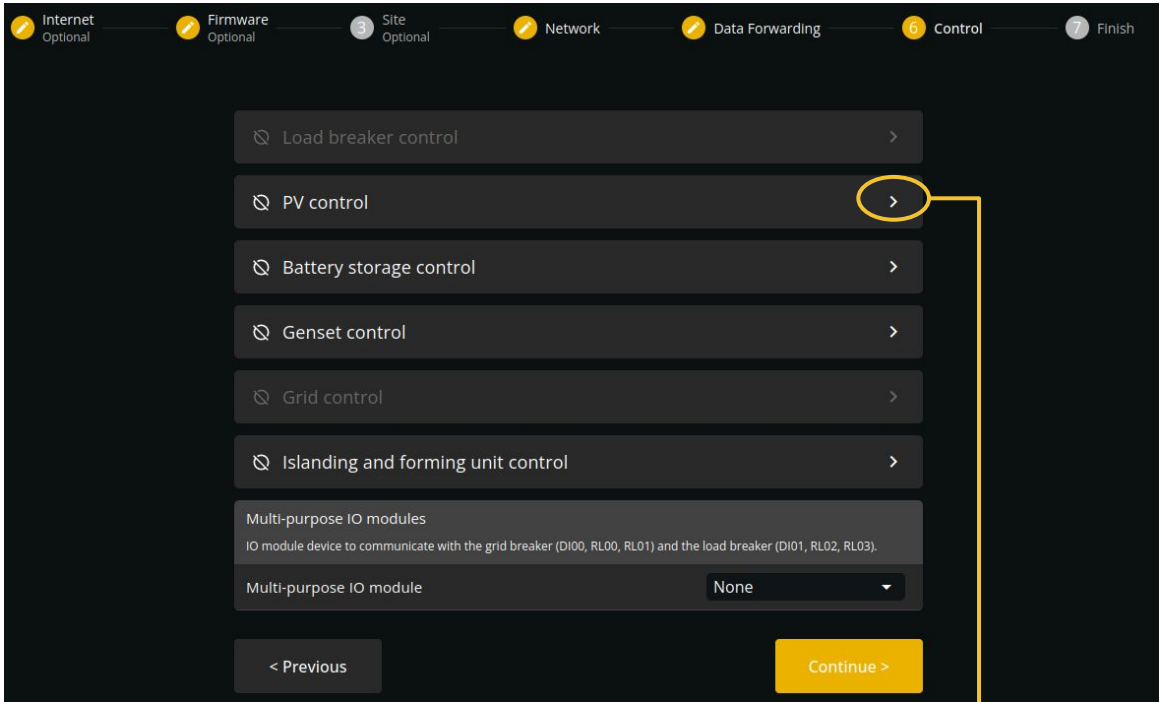

PV control settings

✕ Activate Battery storage control 🔘

BESS rated apparent power values

BESS 20 kVA

Maximum charging power values

BESS 15 kW

Maximum discharging power values

BESS 15 kW

BESS rated capacity values

BESS 50 kWh

Maximum active power setpoint change

Maximum active power setpoint change for the BESS. 5 kW

Maximum state of charge 100 %

Save

Battery storage control settings

✕ Activate Load breaker control 🔘

Control based on state of charge 🔘

Minimum state of charge - deferrable load %

State of charge below which deferrable load can be disconnected.

Control based on load power 🔘

Maximum load power - deferrable load kW

Load power above which deferrable load can be disconnected.

Save

Load breaker control settings

× Activate Genset control



Genset rated apparent power values

Genset kVA

Maximum active power setpoint change kW

Maximum active power setpoint change for the gensets.

Genset minimum loading %

Minimum active power loading setpoint in percentage of genset rated apparent power.

Activate Reactive Power Control

Automatic genset start/stop

Activate automatic genset start/stop for peak shaving

Activate automatic genset start/stop based on BESS SoC

Activate automatic genset start/stop for BESS power assist

Save

Genset control settings

Grid control settings

× Activate Grid control



Activate active power export control

Minimum active power Import at PCC kW

A positive value sets a minimum import at PCC. A negative value sets a maximum export at PCC.

Sensing method for the grid meter

Determines how to calculate the active power reference for the export control function aggregating the measurement from the different phases.

Peak shaving

Activate peak shaving with BESS

Activate peak shaving with genset

Activate reactive power control

Save

✕ Activate Islanding and forming unit control



Grid as forming unit

Activate automatic grid reconnection



Automatically reconnect to the main grid when available. The forming unit is stopped and the grid breaker closed.

BESS as forming unit



Minimum SoC for BESS prime

%

Automatically blackstart the BESS in case of blackout if the SoC is above the configured value. The plant is first islanded, opening the grid breaker, then the BESS is started as forming unit.

Activate automatic transition to genset prime based on SoC



If the minimum SoC for BESS prime is reached, the BESS will be stopped to put the plant in deadbus and the genset will then be started as forming unit.

Genset as forming unit




Save

Islanding and forming unit control settings


Click "Save".

Click "Continue".

STEP 11 - SAVING THE CONFIGURATION AND STARTING THE EMS

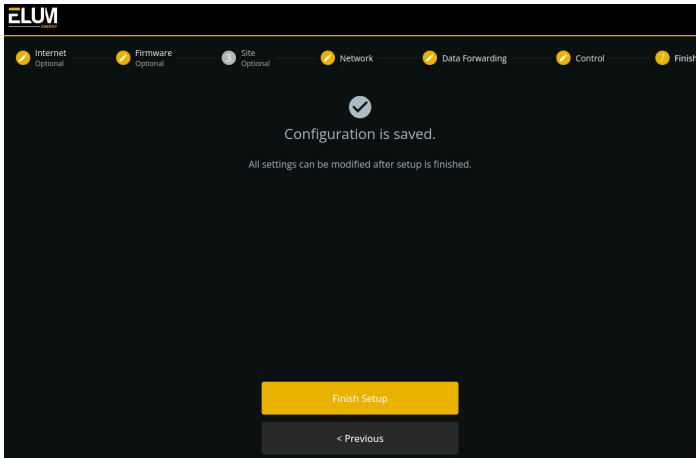

Once you click on the “Finish setup” button, the following page appears. This is the final view of eConf. The EMS is now ready.

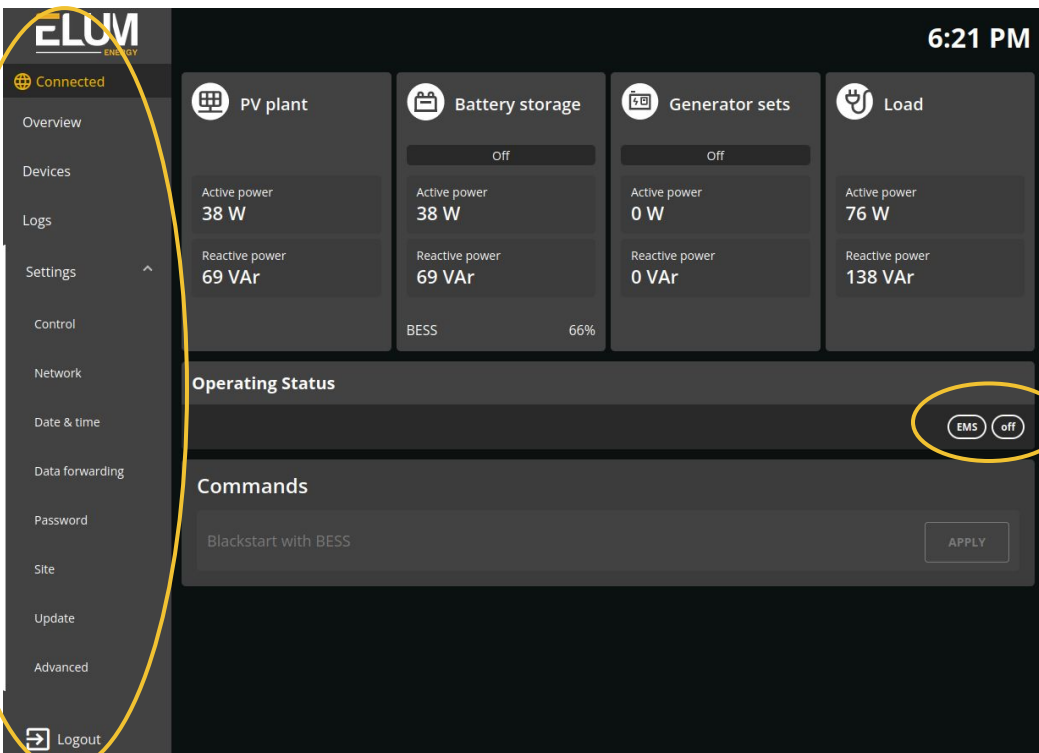

The overview page displays :

- the Active Power of the devices,
- the Reactive Power of the devices,
- The status of the BESS and gensets,
- The devices alarms when applicable,
- The Control Status,
- The PV curtailment (the sum of the setpoints sent by the controller to the inverters).

All the previous tabs can be accessible through the menu on the left. In order to make any modification, please stop the Control.



TROUBLESHOOTING

The table below includes most common issues faced during the installation and configuration of Elum Devices, the possible causes, and the steps to follow to solve them.

Issue	Possible causes	Steps to follow
Serial Communication issues		
Communication with the Serial device cannot be established	<ul style="list-style-type: none"> - Modbus communication not enabled on slave device - Improper RS485 wiring 	<ul style="list-style-type: none"> • Check the port and device communication settings both on eConf and the device itself. • Ensure the Modbus communication is enabled on the devices if applicable. • Ensure the RS485 wires are shielded twisted pairs. • Check the connectivity of the RS485 wires.
Communication with the Serial device is intermittent	<ul style="list-style-type: none"> - Neglected RS485 wiring 	<ul style="list-style-type: none"> • Ensure the RS485 cables are correctly inserted and fixed in the pins. • Check that the RS485 cables are correctly stripped and protected by the sheathing to the pins. • Check that the distance for serial communication is less than 1000m. • Add a termination resistance (120 Ohm) on each end of the RS485 line. <p>Please refer to the Device Connection & Configuration document, for specific instructions.</p>
Ethernet Communication issues		
Communication with the device through Ethernet cannot be established	<ul style="list-style-type: none"> - Modbus communication not enabled on slave device 	<ul style="list-style-type: none"> • Check the port and device communication settings both on eConf and the device itself. • Ensure the Modbus communication is enabled on the devices if applicable.
Communication with the device through Ethernet is intermittent	<ul style="list-style-type: none"> - IP address conflict 	<ul style="list-style-type: none"> • Ensure no IP address is used more than once. <p>Please refer to the Device Connection & Configuration document, for specific instructions.</p>

Issue	Possible causes	Steps to follow
Internet Communication issues		
Local internet access fails	Local internet network configuration invalid	<ul style="list-style-type: none"> Please refer to the note on step 3, for wired internet connection configuration.
Wireless internet network fails	SIM card contract invalid	<ul style="list-style-type: none"> The GSM/3G kit is pre-embedded in the Central Computing Unit. You also need a SIM card with a subscription to a valid “data” contract. <p>Please refer to paragraph 2.1. Option A for more details.</p>
Reboot / Start issues		
Elum Controller reboots when switching from “On grid - Grid connected mode” and to “Off grid - Genset connected mode”.	<ul style="list-style-type: none"> - Unstable power source - Incorrect UPS wiring 	<ul style="list-style-type: none"> The power source supplying the Datalogger / Controller must be taken from the load side, to ensure a continuous power supply constantly. If a UPS is used, the power source of the UPS must follow the same rule as above.
Elum Controller reboots when switching from “Off grid - Genset connected mode” to “On grid - Grid connected mode”.		<p><i>For ePowerControl ES and MC, the use of a UPS is mandatory.</i></p>

Issue	Possible causes	Steps to follow
Reverse power protection issues		
Wrong breaker control	<ul style="list-style-type: none"> - Missing Reverse power protection relay - Incorrect configuration of the Reverse power protection relay 	<p>ePower Control is NOT an electrical protection. It does not replace an adequate protection of diesel generators against power reversal.</p> <p>Please install a dedicated Reverse power protection relay, or a genset controller integrating the reverse current protection function.</p> <p>Please refer to the manufacturer documentation for proper configuration of the relay.</p>
Breaker control fails		
Power meter reading issues		
Power meter monitoring values are incorrect	Incorrect Power meter VTs/CTs ratios	<ul style="list-style-type: none"> • CT ratio: Can be obtained by dividing the primary current by the secondary current. • VT ratio : Can be obtained by dividing the primary voltage by the secondary voltage.
Cos phi is incorrect, All the other power meter monitoring values are correct	Incorrect Power meters VTs/CTs wiring	<ul style="list-style-type: none"> • Rearrange CTs and VTs wiring by respecting phases order.
Power meter monitoring values signs are incorrect	Negative power monitoring not enabled on grid meter	<ul style="list-style-type: none"> • The meter must be a bidirectional one. • Check the configuration of the power meter (measurement type). • Check the CTs installation, which must match the current direction. <p><i>Please refer to the manufacturer documentation for proper configuration of the relay.</i></p>

More Resources are available on: www.elum-energy.com
For more details, you can contact our customer service team at support@elum-energy.com..